

SHAFER ENTERPRISES, LLC

COOL SHIRT®


Personal Cooling Systems

10 Andrew Drive Suite 200

Stockbridge, GA 30281

Sales & Service 800-345-3176 Fax 678-289-4325

www.coolshirt.net

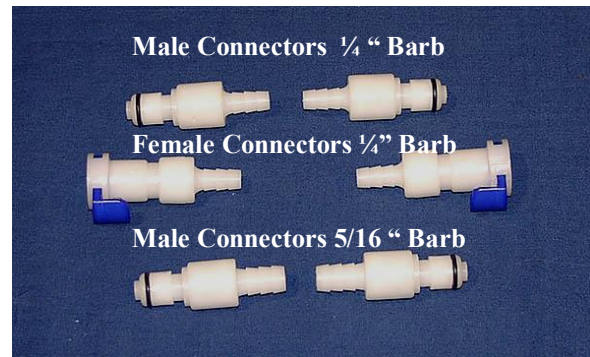

To install any new connectors on the Cool Shirt, Cool Vest, Poncho or insulated hose, follow the steps below that apply:

- 1) Remove your existing male connectors from your *Cool Shirt, Cool Vest or Poncho* by simply cutting them off from the clear tubing just behind the connectors.
- 2) Install the male 5/16 inch large barb connectors to the remaining tubing by stretching the tubing open slightly with a pair of needle nose pliers; dip the barbed end of the new male connectors into some soapy water to lubricate them and insert the barbed ends into the clear tubing until fully seated against the connector.
- 3) Remove your existing female connectors from the end of your *Insulated Hose* (female connectors have the release push-buttons) by simultaneously cutting the insulation and internal black tubing just behind the connectors.
- 4) Install the **male & female** 1/4 inch small barb connectors to the black internal tubing by stretching the tubing open slightly with a pair of needle nose pliers, dip the barbed end of the new female connectors into some soapy water to lubricate them and insert the barbed ends into the black tubing until fully seated against the connector.

Visit our website at

www.CoolShirt.net